

NA2-N SERIES


Related Information

- General terms and conditions F-7
- Sensor selection guide P.461~
- Glossary of terms / General precautions P.1455~ / P.1458~
- Korea's S-mark P.1506

- FIBER SENSORS
- LASER SENSORS
- PHOTOELECTRIC SENSORS
- MICRO PHOTOELECTRIC SENSORS
- AREA SENSORS**
- LIGHT CURTAINS / SAFETY COMPONENTS
- PRESSURE / FLOW SENSORS
- INDUCTIVE PROXIMITY SENSORS
- PARTICULAR USE SENSORS
- SENSOR OPTIONS
- SIMPLE WIRE-SAVING UNITS
- WIRE-SAVING SYSTEMS
- MEASUREMENT SENSORS
- STATIC ELECTRICITY PREVENTION DEVICES
- LASER MARKERS
- PLC
- HUMAN MACHINE INTERFACES
- ENERGY CONSUMPTION VISUALIZATION COMPONENTS
- FA COMPONENTS
- MACHINE VISION SYSTEMS
- UV CURING SYSTEMS

- Selection Guide
- Slim Body**
- Picking
- Other Products

NA2-N

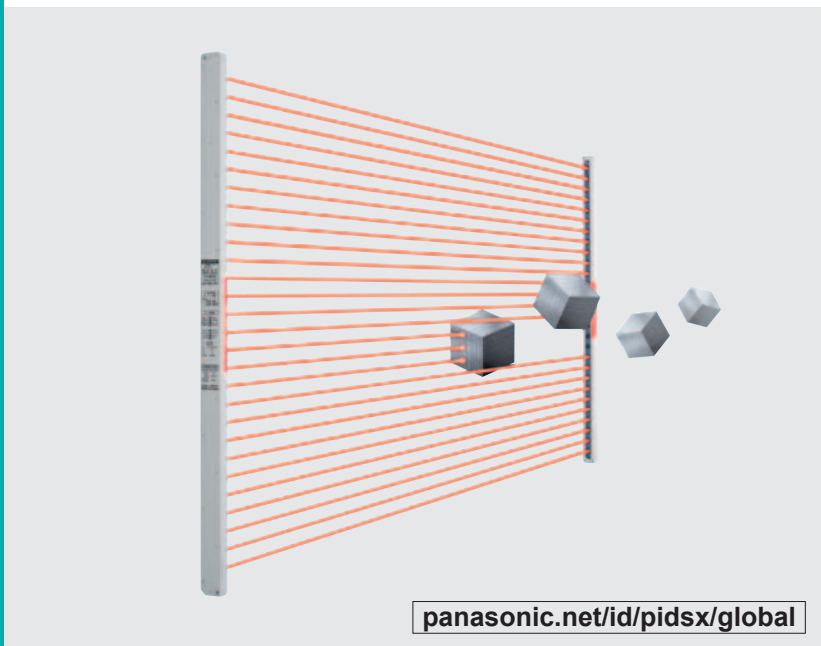

Make sure to use light curtains when using a sensing device for personnel protection. Refer to p.495~ for details of light curtains.




Slim body 13 mm 0.512 in Maximum sensing height 540 mm 21.260 in

Maximum sensing height 540 mm 21.260 in (28 beam channels)

The thin resin case type area sensor has a sensing height of 540 mm 21.260 in (28 beam channels), a beam pitch of 20 mm 0.787 in (minimum sensing object of ϕ 30 mm ϕ 1.181 in), and sensing range of 5 m 16.404 ft to meet a variety of needs.

Slim body of just 13 mm 0.512 in thick

The slim-bodied NA2-N series fits right in your equipment, since it is only 13 mm 0.512 in thick and 30 mm 1.181 in wide. It does not get in the way of your access to the machine.

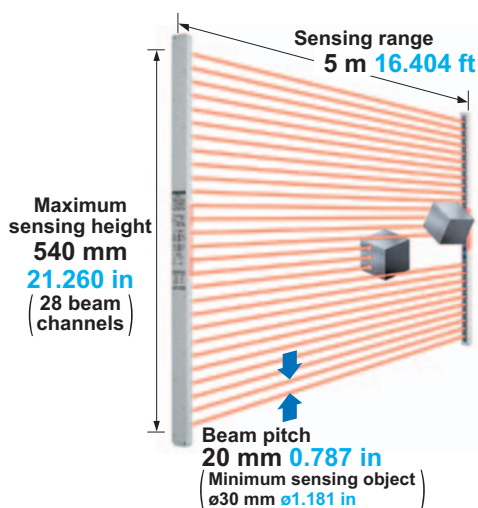

VARIETIES

6 types of sensing height

In addition to the conventional 12, 16, and 20 beam channel types, this new lineup includes 8, 24, and 28 beam channel types. A wide model variation is provided with sensing heights from 540 mm 21.260 in (28 beam channels) to 140 mm 5.512 in (8 beam channels).


BASIC PERFORMANCE

Globally usable


It conforms to the EMC Directive and obtains the UL Recognition. Products that has obtained the Korea's S-mark certification are available as well. Moreover, PNP output type which is much in demand in Europe is also available.

APPLICATIONS


Detecting falling objects whose path is uncertain

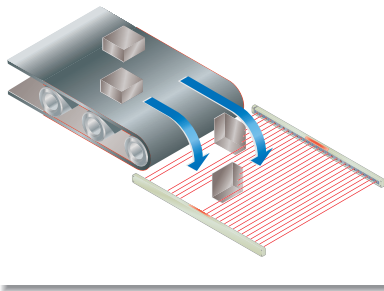

Detecting a loop

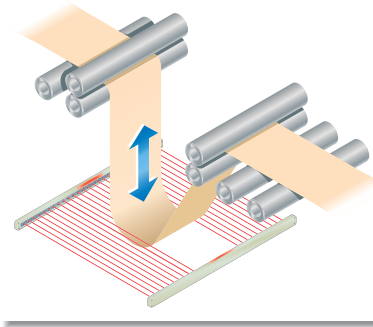

Preventing wrong parts picking

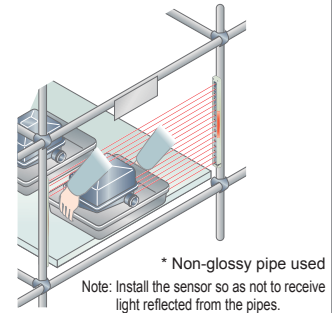


FUNCTIONS

Clearly visible wide job indicator


Both the receiver and the emitter feature job indicators, 102 mm 4.016 in wide, with red bright LEDs.

When the sensing output and the job indicator input are connected, the job indicator can be used as a large operation indicator.

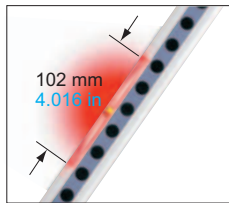



Interference prevention for parallel installation

By setting different emission frequencies for two sensors, mutual interference can be prevented. There is no problem even when the sensors are parallel installed for wide detections area coverage. Moreover, the set frequencies can be identified by how many times the emitting indicators is light up.

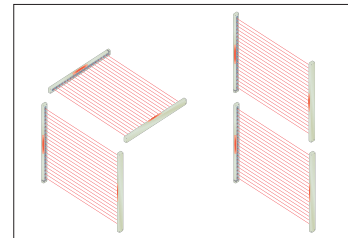

Selectable lighting pattern


The operation of the job indicator can be selected using the operation mode selection switch.

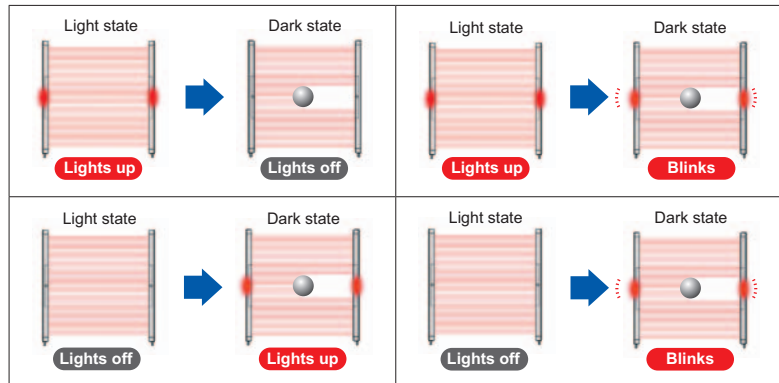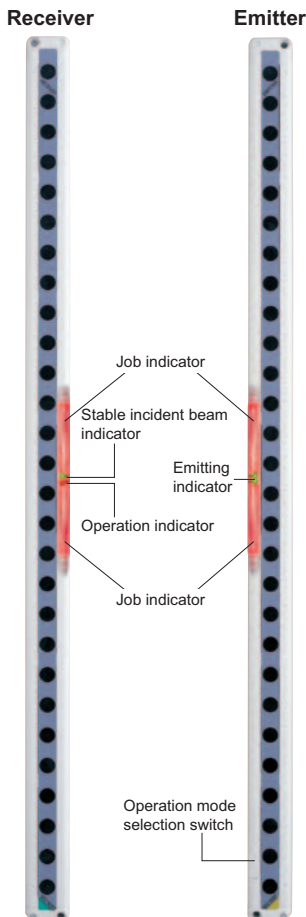

MAINTENANCE

Convenient test input (emission halt) function

Beam output can be stopped via the input of an external signal. This is a useful test input (emission halt) function when beginning operation.

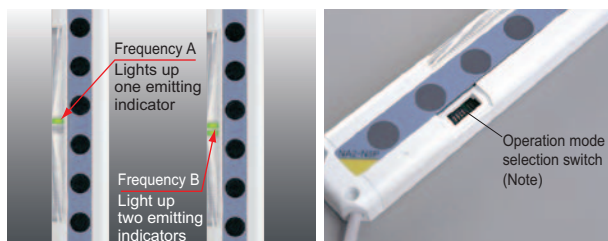

Note: The photo above shows an 8 beam channels type. The operation mode selection switch is equipped on the left side of the main body for models other than the 8 beam channels type.

FIBER SENSORS

LASER SENSORS

PHOTOELECTRIC SENSORS

MICRO PHOTOELECTRIC SENSORS

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide

Slim Body

Picking

Other Products

NA2-N

ORDER GUIDE

| Type | Appearance | Sensing range | Model No. (Note) | Number of beam channels | Sensing height (mm in) | Output |
|-----------------|------------|---------------|-------------------|-------------------------|------------------------|-------------------------------|
| NPN output type | | 5 m 16.404 ft | NA2-N8 | 8 | 140 5.512 | NPN open-collector transistor |
| | | | NA2-N12 | 12 | 220 8.661 | |
| | | | NA2-N16 | 16 | 300 11.811 | |
| | | | NA2-N20 | 20 | 380 14.961 | |
| | | | NA2-N24 | 24 | 460 18.110 | |
| PNP output type | | | NA2-N8-PN | 8 | 140 5.512 | PNP open-collector transistor |
| | | | NA2-N12-PN | 12 | 220 8.661 | |
| | | | NA2-N16-PN | 16 | 300 11.811 | |
| | | | NA2-N20-PN | 20 | 380 14.961 | |
| | | | NA2-N24-PN | 24 | 460 18.110 | |
| | | | NA2-N28-PN | 28 | 540 21.260 | |

Note: The model No. with "P" shown on the label affixed to the product is the emitter, "D" shown on the label is the receiver.

5 m 16.404 ft cable length type

5 m 16.404 ft cable length type (standard: 3 m 9.843 ft) is also available for NPN output type. When ordering this type, suffix "-C5" to the model No. (e.g.) 5 m 16.404 ft cable length type of **NA2-N8** is "**NA2-N8-C5**".

Products that have obtained Korea's S-mark certification

There are NPN output type products (excluding the 5 m cable length type) that have obtained Korea's S-mark certification. When ordering this type, suffix "-K" to the model No. (e.g.) The **NA2-N8** with Korea's S-mark is "**NA2-N8-K**".

OPTIONS


| Designation | Model No. | Description |
|--------------------------------|-------------------|--|
| Slit mask | OS-NA2-N8 | For 8 beam channels |
| | OS-NA2-N12 | For 12 beam channels |
| | OS-NA2-N16 | For 16 beam channels |
| | OS-NA2-N20 | For 20 beam channels |
| | OS-NA2-N24 | For 24 beam channels |
| | OS-NA2-N28 | For 28 beam channels |
| Sensor mounting bracket (Note) | MS-NA1-1 | Four bracket set Eight M4 (length 18 mm 0.709 in) screws with washers (Four screws with washers are used), eight nuts, four hooks, four spacers and four M4 (length 15 mm 0.591 in) screws with washers are attached. Spacers are not attached with MS-NA1-1 . M4 (length 15 mm 0.591 in) screws with washers are not used for NA2-N series. |
| | MS-NA2-1 | |
| Sensor supporting bracket | MS-NA3-N8 | For 8 beam channels |
| | MS-NA3-N12 | For 12 beam channels |
| | MS-NA3-N16 | For 16 beam channels |
| | MS-NA3-N20 | For 20 beam channels |
| | MS-NA3-N24 | For 24 beam channels |
| | MS-NA3-N28 | For 28 beam channels |

Note: Do not fix the sensor mounting bracket on the front surface of the sensor.

Slit mask

• **OS-NA2-N□**


The slit mask restricts the amount of beam emitted or received and is used to reduce interference between neighboring sensors. It is also used in cases when the beam intensity is too strong penetrating through the sensing object. Remove the cover (name plate) from the front of the sensor and replace it with the slit mask. The sensing range is reduced when the slit mask is used.

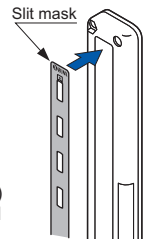

Sensor mounting bracket

• **MS-NA1-1**

• **MS-NA2-1**

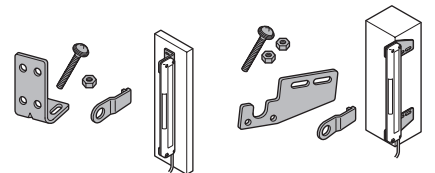


M4 screws with washers, nuts, and hooks are attached.

M4 screws with washers, nuts, hooks and spacers are attached.

Sensor supporting bracket

• **MS-NA3-N□**

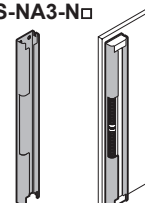

SPECIFICATIONS

| Item | Number of beam channels | | 8 | 12 | 16 | 20 | 24 | 28 | |
|---|--------------------------|--|---|--|--|--|--|-------------------------|--|
| | Model No. | | NA2-N8 | NA2-N12 | NA2-N16 | NA2-N20 | NA2-N24 | NA2-N28 | |
| | | NPN output | | | | | | | |
| | | PNP output | NA2-N8-PN | NA2-N12-PN | NA2-N16-PN | NA2-N20-PN | NA2-N24-PN | NA2-N28-PN | |
| Sensing height | | | 140 mm 5.512 in | 220 mm 8.661 in | 300 mm 11.811 in | 380 mm 14.961 in | 460 mm 18.110 in | 540 mm 21.260 in | |
| Sensing range | | | 5 m 16.404 ft | | | | | | |
| Beam pitch | | | 20 mm 0.787 in | | | | | | |
| Sensing object | | | ø30 mm ø1.181 in or more opaque object (completely beam interrupted objects) | | | | | | |
| Supply voltage | | | 12 to 24 V DC ±10 % Ripple P-P 10 % or less | | | | | | |
| Power consumption (Note 2) | Emitter | Job indicator ON | 0.7 W or less | 0.8 W or less | 0.9 W or less | 1.0 W or less | 1.1 W or less | 1.2 W or less | |
| | | Job indicator OFF | 0.6 W or less | 0.7 W or less | 0.8 W or less | 0.9 W or less | 1.0 W or less | 1.1 W or less | |
| | Receiver | Job indicator ON | 0.7 W or less | 0.8 W or less | 0.9 W or less | 1.0 W or less | 1.1 W or less | 1.2 W or less | |
| | | Job indicator OFF | 0.6 W or less | 0.7 W or less | 0.8 W or less | 0.9 W or less | 1.0 W or less | 1.1 W or less | |
| Output | | | <NPN output type> NPN open-collector transistor | | | | <PNP output type> PNP open-collector transistor | | |
| | | | <ul style="list-style-type: none"> Maximum sink current: 100 mA Applied voltage: 30 V DC or less (between output and 0 V) Residual voltage: 2 V or less (at 100 mA sink current) | | | | <ul style="list-style-type: none"> Maximum source current: 100 mA Applied voltage: 30 V DC or less (between output and +V) Residual voltage: 2 V or less (at 100 mA source current) | | |
| | Utilization category | | DC-12 or DC-13 | | | | | | |
| | Output operation | | ON when all beam channels are received (OFF when one or more beam channels are interrupted) | | | | | | |
| Short-circuit protection | | Incorporated | | | | | | | |
| Response time | | 10 ms or less (12 ms or less when the interference prevention function is used) | | | | | | | |
| Indicators | Emitter | Emitting indicator: Green LED × 2 (light up during emission; one LED lights up for Frequency A setting, both LEDs light up for Frequency B setting) Job indicator: Red LED (lights up, blinks or lights off when the job indicator input is applied, selected by operation mode switch) | | | | | | | |
| | Receiver | Operation indicator: Red LED (lights up when one or more beam channels are interrupted) Stable incident beam indicator: Green LED (lights up when all beam channels are stably received) Job indicator: Red LED (lights up, blinks or lights off when the job indicator input is applied, selected by operation mode switch) * When an excess current flows through the output, the stable incident beam indicator and the operation indicator on the receiver blink simultaneously due to operation of the short-circuit protection circuit. | | | | | | | |
| Interference prevention function | | Incorporated | | | | | | | |
| Test input (emission halt) function | | Incorporated | | | | | | | |
| Environmental resistance | Pollution degree | | 3 (Industrial environment) | | | | | | |
| | Protection | | IP40 (IEC) | | | | | | |
| | Ambient temperature | | -10 to +55 °C +14 to +131 °F (No dew condensation or icing allowed), Storage: -10 to +60 °C +14 to +140 °F | | | | | | |
| | Ambient humidity | | 35 to 85 % RH, Storage: 35 to 85 % RH | | | | | | |
| | Ambient illuminance | | Incandescent light: 3,000 lx at the light-receiving face | | | | | | |
| | EMC | | EN 60947-5-2 | | | | | | |
| | Voltage withstandability | | 1,000 V AC for one min. between all supply terminals connected together and enclosure | | | | | | |
| | Insulation resistance | | 20 MΩ, or more, with 250 V DC megger between all supply terminals connected together and enclosure | | | | | | |
| Vibration resistance | | 10 to 150 Hz frequency, 0.75 mm 0.030 in amplitude in X, Y and Z directions for two hours each | | | | | | | |
| Shock resistance | | 500 m/s ² acceleration (50 G approx.) in X, Y and Z directions for three times each | | | | | | | |
| Emitting element | | Infrared LED (Peak emission wavelength: 950 nm 0.037 mil , modulated) | | | | | | | |
| Material | | Enclosure: Heat-resistant ABS, Lens cover: Polyester, Indicator cover: Acrylic | | | | | | | |
| Cable | | 0.2 mm ² 4-core cable, 3 m 9.843 ft long | | | | | | | |
| Cable extension | | Extension up to total 25 m 82.021 ft is possible for both emitter and receiver, with 0.2 mm ² , or more, cable. | | | | | | | |
| Weight (Total weight of emitter and receiver) | | Net weight: 350 g approx. Gross weight: 550 g approx. | Net weight: 400 g approx. Gross weight: 600 g approx. | Net weight: 450 g approx. Gross weight: 650 g approx. | Net weight: 500 g approx. Gross weight: 700 g approx. | Net weight: 570 g approx. Gross weight: 750 g approx. | Net weight: 650 g approx. Gross weight: 800 g approx. | | |

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +23 °C **+73.4 °F**.
2) Obtain the current consumption from the following equation.

Current consumption = Power consumption ÷ Supply voltage
(e.g.) In case of **NA2-N8** (when job indicator lights up)

When the supply voltage is 12 V, the current consumption of the emitter is: 0.7 W ÷ 12 V ≈ 0.058 A = 58 mA.

FIBER
SENSORSLASER
SENSORSPHOTO-
ELECTRIC
SENSORSMICRO
PHOTO-
ELECTRIC
SENSORSAREA
SENSORSLIGHT
CURTAINS /
SAFETY
COMPONENTSPRESSURE /
FLOW
SENSORSINDUCTIVE
PROXIMITY
SENSORSPARTICULAR
USE
SENSORSSENSOR
OPTIONSSIMPLE
WIRE-SAVING
UNITSWIRE-SAVING
SYSTEMSMEASURE-
MENT
SENSORSSTATIC
ELECTRICITY
PREVENTION
DEVICESLASER
MARKERS

PLC

HUMAN
MACHINE
INTERFACESENERGY
CONSUMPTION
VISUALIZATION
COMPONENTSFA
COMPONENTSMACHINE
VISION
SYSTEMSUV
CURING
SYSTEMSSelection
GuideSlim
Body

Picking

Other
Products**NA2-N**


- FIBER SENSORS
- LASER SENSORS
- PHOTO-ELECTRIC SENSORS
- MICRO PHOTO-ELECTRIC SENSORS
- AREA SENSORS
- LIGHT CURTAINS / SAFETY COMPONENTS
- PRESSURE / FLOW SENSORS
- INDUCTIVE PROXIMITY SENSORS
- PARTICULAR USE SENSORS
- SENSOR OPTIONS
- SIMPLE WIRE-SAVING UNITS
- WIRE-SAVING SYSTEMS
- MEASUREMENT SENSORS
- STATIC ELECTRICITY PREVENTION DEVICES
- LASER MARKERS
- PLC
- HUMAN MACHINE INTERFACES
- ENERGY CONSUMPTION VISUALIZATION COMPONENTS
- FA COMPONENTS
- MACHINE VISION SYSTEMS
- UV CURING SYSTEMS
- Selection Guide
- Slim Body
- Picking
- Other Products
- NA2-N**

I/O CIRCUIT AND WIRING DIAGRAMS


NPN output type

I/O circuit diagram

Emitter

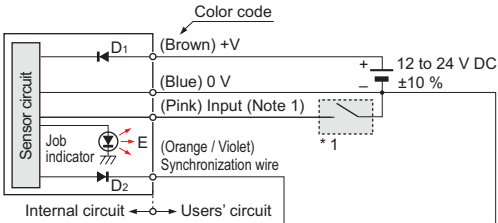

Receiver

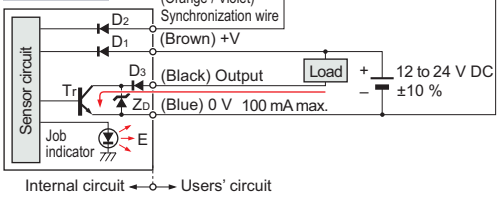


- Notes: 1) Input (pink) is the job indicator input when No. 4 of the operation mode switch on the emitter is set to the OFF side, and it is the test input (emission halt input) when the switch is set to the ON side.
- 2) In order to use the job indicator as a large operation indicator, connect the input (pink) of the emitter to the output (black) of the receiver.
- 3) When the test input (emission halt input) is set, the job indicator does not light up or blink.



Symbols ... D1: Reverse supply polarity protection diode
 D2: Reverse current protection diode
 D3: Reverse output polarity protection diode
 ZD: Surge absorption zener diode
 Tr: NPN output transistor
 E: Job indicator

Wiring diagram

Emitter

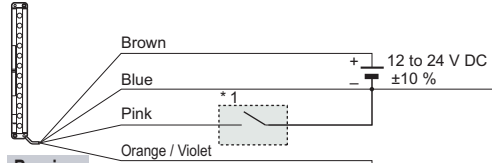

Receiver

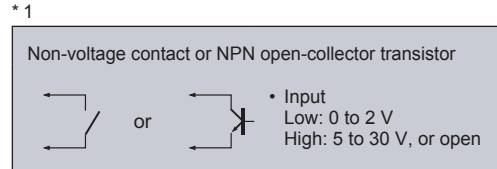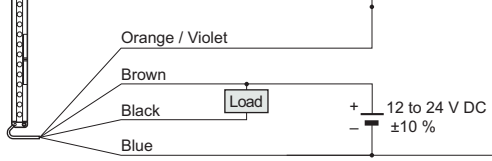


Note: Refer to "PRECAUTIONS FOR PROPER USE" for job indicator operation or test input (emission halt input) operation.


PNP output type

I/O circuit diagram

Emitter

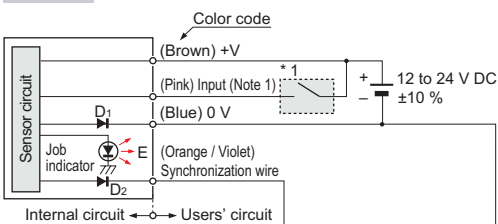

Receiver

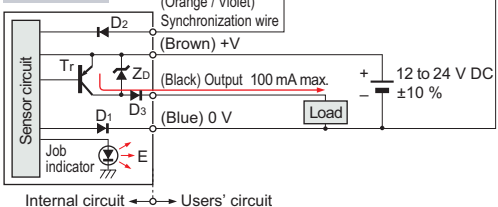


- Notes: 1) Input (pink) is the job indicator input when No. 4 of the operation mode switch on the emitter is set to the OFF side, and it is the test input (emission halt input) when the switch is set to the ON side.
- 2) In order to use the job indicator as a large operation indicator, connect the input (pink) of the emitter to the output (black) of the receiver.
- 3) When the test input (emission halt input) is set, the job indicator does not light up or blink.



Symbols ... D1: Reverse supply polarity protection diode
 D2: Reverse current protection diode
 D3: Reverse output polarity protection diode
 ZD: Surge absorption zener diode
 Tr: PNP output transistor
 E: Job indicator

Wiring diagram

Emitter

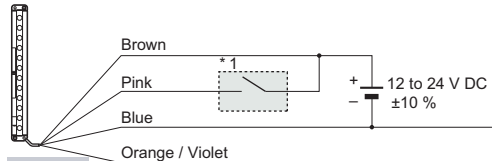


Receiver

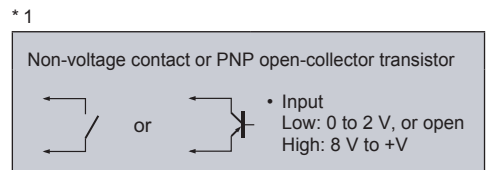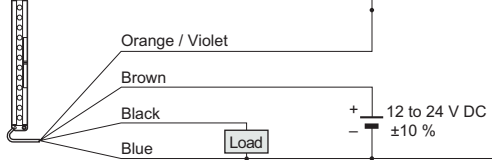


Note: Refer to "PRECAUTIONS FOR PROPER USE" for job indicator operation or test input (emission halt input) operation.

SENSING CHARACTERISTICS (TYPICAL)


Correlation between setting distance and excess gain

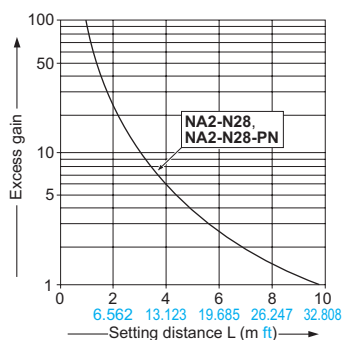

Parallel deviation (All models)

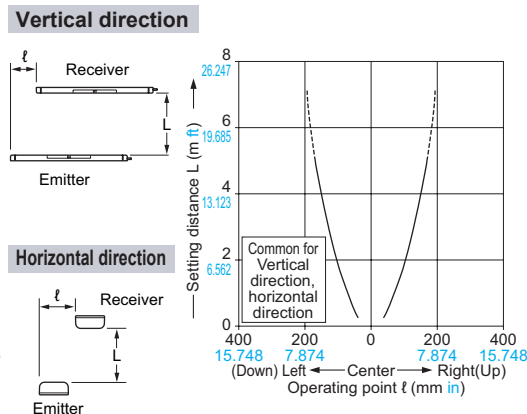

Angular deviation (All models)

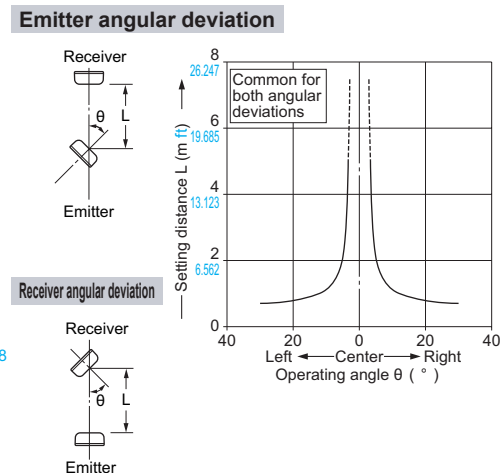


PRECAUTIONS FOR PROPER USE

Refer to p.1458~ for general precautions.


- Never use this product as a sensing device for personnel protection.
- For sensing devices to be used as safety devices for press machines or for personnel protection, use products which meet standards, such as OSHA, ANSI or IEC etc., for personnel protection applicable in each region or country.
- If this product is used as a sensing device for personnel protection, death or serious body injury could result.
- For a product which meets safety standards, use the following products.
Type 4: **SF4C** series (p.531~)
Type 2: **SF2C** series (p.551~)

Mounting

- Use M4 screws with washers and M4 nuts. The tightening torque should be 0.5 N·m or less. During mounting, do not apply any bending or twisting force to the sensor.
- (Purchase the screws and nuts) separately.

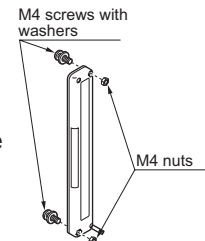

Functional description

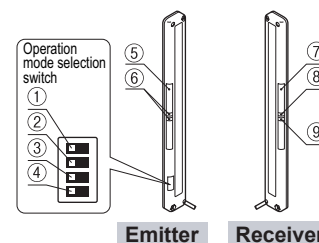

Job indicator operation selection

- The operation of the job indicator can be selected with job indicator mode switch.

| Operation made switch | Job indicator operation | | | |
|-----------------------|-------------------------|------------|---------------------|------------|
| | NPN output type | | PNP output type | |
| | Job indicator input | | Job indicator input | |
| | Low | High | Low | High |
| 1 2 3 4 | Lights up | Lights off | Lights off | Lights up |
| 1 2 3 4 | Lights off | Lights up | Lights up | Lights off |
| 1 2 3 4 | Lights up | Blinks | Blinks | Lights up |
| 1 2 3 4 | Lights off | Blinks | Blinks | Lights off |

Job indicator input signal condition

| Type | Signal | Signal condition |
|------------|--------|---------------------------|
| NPN output | Low | 0 to 2 V |
| | High | 5 to 30 V, or open (Note) |
| PNP output | Low | 0 to 2 V, or open (Note) |
| | High | 8 V to +V |

Note: Insulate the wire if it is kept open.

| | Description | Function | |
|----------|--|--|--|
| Emitter | ① Emission frequency selection switch | 1 : Frequency A | 1 : Frequency B |
| | ② Job indicator mode switch | 2 : the job indicator input is Low | 2 : the job indicator input is Low |
| | | 3 : Lighting | 3 : Blinking |
| | | 4 : Job indicator input | 4 : Test input (emission halt input) |
| | ⑤ Job indicator (Red LED) | Lights up, blinks or lights off when the job indicator input is applied, selected by operation mode switch. | |
| | ⑥ Emitting indicator (Green LED × 2) | Light up during emission; one LED lights up for Frequency A setting, both LEDs light up for Frequency B setting. | |
| Receiver | ⑦ Job indicator (Red LED) | Lights up, blinks or lights off when the job indicator input is applied, selected by operation mode switch. | |
| | ⑧ Stable incident beam indicator (Green LED) | Lights up when all beam channels are stably received. | When an excess current flows through the output, the stable incident beam indicator and the operation indicator on the receiver blink simultaneously due to the operation of the short-circuit protection circuit. |
| | ⑨ Operation indicator (Red LED) | Lights up when one or more beam channels are interrupted. | |

- FIBER SENSORS
- LASER SENSORS
- PHOTO-ELECTRIC SENSORS
- MICRO PHOTO-ELECTRIC SENSORS
- AREA SENSORS
- LIGHT CURTAINS / SAFETY COMPONENTS
- PRESSURE / FLOW SENSORS
- INDUCTIVE PROXIMITY SENSORS
- PARTICULAR USE SENSORS
- SENSOR OPTIONS
- SIMPLE WIRE-SAVING UNITS
- WIRE-SAVING SYSTEMS
- MEASUREMENT SENSORS
- STATIC ELECTRICITY PREVENTION DEVICES
- LASER MARKERS
- PLC
- HUMAN MACHINE INTERFACES
- ENERGY CONSUMPTION VISUALIZATION COMPONENTS
- FA COMPONENTS
- MACHINE VISION SYSTEMS
- UV CURING SYSTEMS

- Selection Guide
- Slim Body
- Picking
- Other Products

NA2-N

FIBER SENSORS
LASER SENSORS
PHOTO-ELECTRIC SENSORS
MICRO PHOTO-ELECTRIC SENSORS
AREA SENSORS
LIGHT CURTAINS / SAFETY COMPONENTS
PRESSURE / FLOW SENSORS
INDUCTIVE PROXIMITY SENSORS
PARTICULAR USE SENSORS
SENSOR OPTIONS
SIMPLE WIRE-SAVING UNITS
WIRE-SAVING SYSTEMS
MEASUREMENT SENSORS
STATIC ELECTRICITY PREVENTION DEVICES
LASER MARKERS
PLC
HUMAN MACHINE INTERFACES
ENERGY CONSUMPTION VISUALIZATION COMPONENTS
FA COMPONENTS
MACHINE VISION SYSTEMS
UV CURING SYSTEMS

PRECAUTIONS FOR PROPER USE

Refer to p.1458~ for general precautions.

To use job indicator as large operation indicator


- The job indicators can be used as large operation indicators by setting No. 4 of the operation mode switch to the OFF side and connecting the input (pink) of the emitter to the output (black) of the receiver.

| Job indicator mode switch | Light state | Dark state |
|---------------------------|-------------|------------|
| | Lights up | Lights off |
| | Lights off | Lights up |
| | Lights up | Blinks |
| | Lights off | Blinks |

Note: In order to use the job indicators as large operation indicators, make sure to set No. 4 of the operation mode switch to the OFF side. If it is set to the ON side, the job indicator does not light up or blink.

Orientation

- The emitter and the receiver must face each other correctly. If they are set upside down, the sensor does not work.

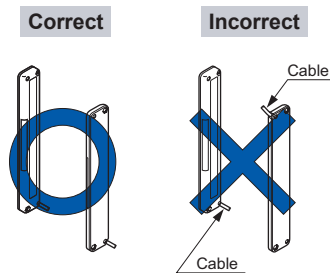


Test input (emission halt) function

- The emission is stopped when No. 4 of the operation mode switch is set to the ON side and the input (pink) of the emitter is made High (PNP output type: Low). Since the output can be turned ON / OFF without the sensing object, this function is useful for start-up inspection. If the output follows the application / withdrawal of the test input (emission halt input), the sensor operation is normal, else it is abnormal.

Operation mode switch setting

| OFF | ON |
|-----|----|
| | |


Time chart



- Notes: 1) When the test input (emission halt) function is set, the job indicator (red) does not light up or blink.
 2) When emission is stopped during the test input (emission halt) function, the emitter's emitting indicator (green) does not light up.

Interference prevention function

- By setting different emission frequencies, two units of **NA2-N** series can be mounted close together, as shown in the figure below. The emission frequency can be checked by the number of LEDs lighting up in the emitting indicator on the emitter.

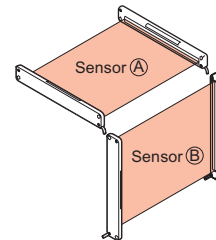

| | Operation mode switch | Emitting indicator (Emitter) |
|----------|-----------------------|------------------------------|
| Sensor A | Frequency A | One LED lights up |
| Sensor B | Frequency B | Two LEDs light up |


Wiring

- Make sure that the power supply is off while wiring.
- Verify that the supply voltage variation is within the rating.
- If power is supplied from a commercial switching regulator, ensure that the frame ground (F.G.) terminal of the power supply is connected to an actual ground.
- In case noise generating equipment (switching regulator, inverter motor, etc.) is used in the vicinity of this sensor, connect the frame ground. (F.G.) terminal of the equipment to an actual ground.
- Do not run the wires together with high-voltage lines or power lines or put them in the same raceway. This can cause malfunction due to induction.

Use conditions to comply with CE Marking

- Following work must be done in case of using this product as a CE marking (European standard EMC Directive) conforming product.

Place ferrite core at the sensor cable.

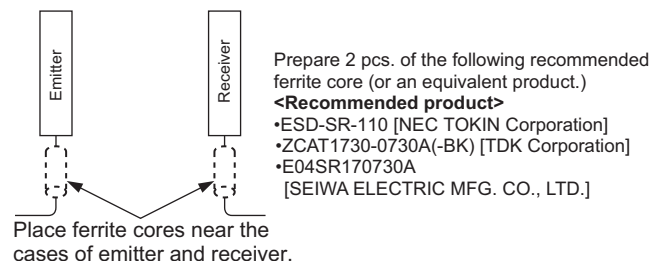

Others

- Do not use during the initial transient time (500 ms) after the power supply is switched on.
- Avoid dust, dirt and steam.
- Take care that the sensor does not come in direct contact with water, oil, grease, or organic solvents, such as, thinner, etc.
- Take care that the sensor is not directly exposed to fluorescent light from a rapid-starter lamp or a high frequency lighting device, as it may affect the sensing performance.


DIMENSIONS (Unit: mm in)

The CAD data in the dimensions can be downloaded from our website.

NA2-N□ NA2-N□-PN


Sensor

Emitter

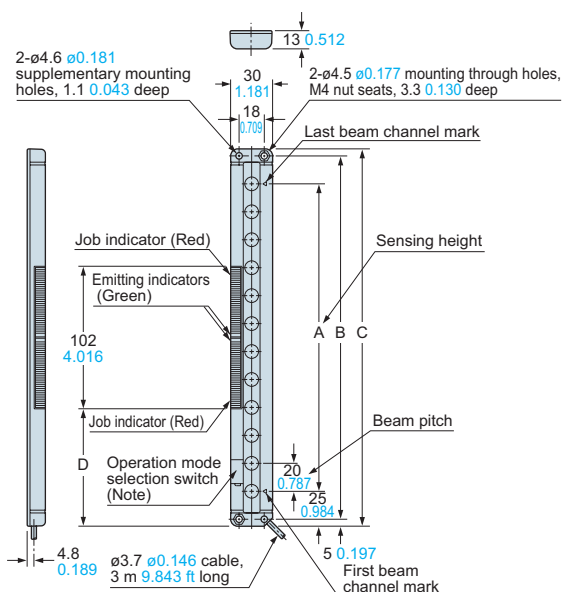

Note: Located on the right side in case of **NA2-N8(-PN)**.

Receiver

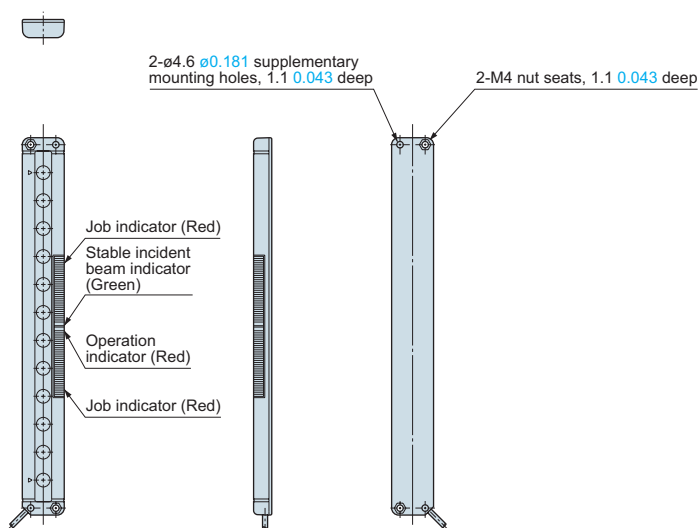


| Model No. | A | B | C | D |
|---------------------|------------|------------|------------|-----------|
| NA2-N8(-PN) | 140 5.512 | 180 7.087 | 190 7.480 | 52 2.047 |
| NA2-N12(-PN) | 220 8.661 | 260 10.236 | 270 10.630 | 84 3.307 |
| NA2-N16(-PN) | 300 11.811 | 340 13.386 | 350 13.780 | 124 4.882 |
| NA2-N20(-PN) | 380 14.961 | 420 16.535 | 430 16.929 | 164 6.457 |
| NA2-N24(-PN) | 460 18.110 | 500 19.685 | 510 20.079 | 204 8.031 |
| NA2-N28(-PN) | 540 21.260 | 580 22.835 | 590 23.228 | 244 9.606 |

MS-NA1-1

Sensor mounting bracket (Optional)

Assembly dimensions


Mounting drawing with the receiver

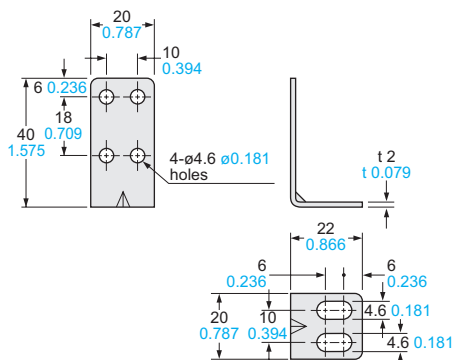

Material: Cold rolled carbon steel (SPCC)
 (Uni-chrome plated)

Four bracket set

Eight M4 (length 18 mm 0.709 in) screws with washers
 (Four screws with washers are used), eight nuts, four hooks, and four M4 (length 15 mm 0.591 in) screws with washers are attached.
 M4 (length 15 mm 0.591 in) screws with washers are not used for **NA2-N** series.

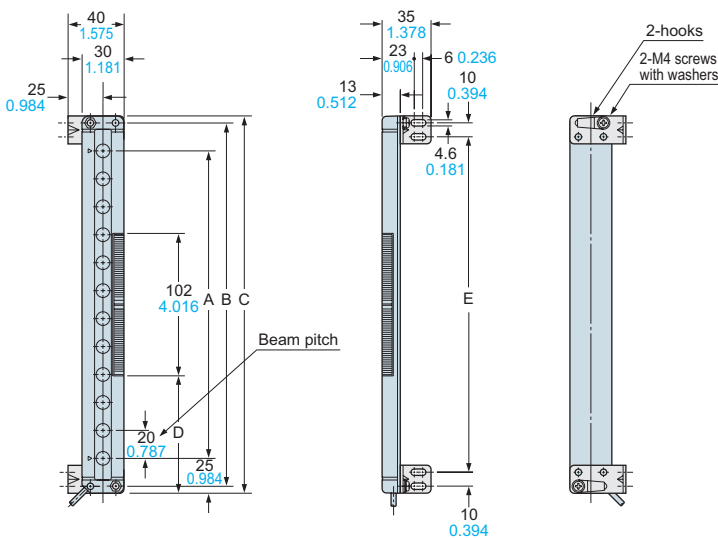

| Model No. | A | B | C | D | E |
|---------------------|------------|------------|------------|-----------|------------|
| NA2-N8(-PN) | 140 5.512 | 180 7.087 | 190 7.480 | 52 2.047 | 160 6.299 |
| NA2-N12(-PN) | 220 8.661 | 260 10.236 | 270 10.630 | 84 3.307 | 240 9.449 |
| NA2-N16(-PN) | 300 11.811 | 340 13.386 | 350 13.780 | 124 4.882 | 320 12.598 |
| NA2-N20(-PN) | 380 14.961 | 420 16.535 | 430 16.929 | 164 6.457 | 400 15.748 |
| NA2-N24(-PN) | 460 18.110 | 500 19.685 | 510 20.079 | 204 8.031 | 480 18.898 |
| NA2-N28(-PN) | 540 21.260 | 580 22.835 | 590 23.228 | 244 9.606 | 560 22.047 |

FIBER SENSORS
 LASER SENSORS
 PHOTO-ELECTRIC SENSORS
 MICRO PHOTO-ELECTRIC SENSORS
AREA SENSORS
 LIGHT CURTAINS / SAFETY COMPONENTS
 PRESSURE / FLOW SENSORS
 INDUCTIVE PROXIMITY SENSORS
 PARTICULAR USE SENSORS
 SENSOR OPTIONS
 SIMPLE WIRE-SAVING UNITS
 WIRE-SAVING SYSTEMS
 MEASUREMENT SENSORS
 STATIC ELECTRICITY PREVENTION DEVICES
 LASER MARKERS
 PLC
 HUMAN MACHINE INTERFACES
 ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS
 MACHINE VISION SYSTEMS
 UV CURING SYSTEMS
 Selection Guide
Slim Body
 Picking
 Other Products

NA2-N

- FIBER SENSORS
- LASER SENSORS
- PHOTO-ELECTRIC SENSORS
- MICRO PHOTO-ELECTRIC SENSORS
- AREA SENSORS
- LIGHT CURTAINS/ SAFETY COMPONENTS
- PRESSURE / FLOW SENSORS
- INDUCTIVE PROXIMITY SENSORS
- PARTICULAR USE SENSORS
- SENSOR OPTIONS
- SIMPLE WIRE-SAVING UNITS
- WIRE-SAVING SYSTEMS
- MEASURE-MENT SENSORS
- STATIC ELECTRICITY PREVENTION DEVICES
- LASER MARKERS
- PLC
- HUMAN MACHINE INTERFACES
- ENERGY CONSUMPTION VISUALIZATION COMPONENTS
- FA COMPONENTS
- MACHINE VISION SYSTEMS
- UV CURING SYSTEMS

- Selection Guide
- Slim Body
- Picking
- Other Products
- NA2-N**

DIMENSIONS (Unit: mm in)


The CAD data in the dimensions can be downloaded from our website.

MS-NA2-1

Sensor mounting bracket (Optional)

Assembly dimensions


Mounting drawing with the receiver

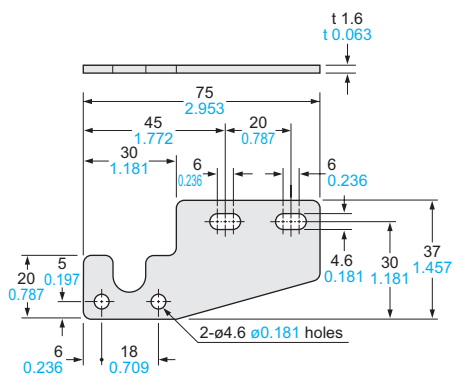

Material: Cold rolled carbon steel (SPCC)
(Uni-chrome plated)

Four bracket set

Eight M4 (length 18 mm 0.709 in) screws with washers (Four screws with washers are used, eight nuts, four hooks, four spacers, and four M4 (length 15 mm 0.591 in) screws with washers are attached. M4 (length 15 mm 0.591 in) screws with washers are not used for NA2-N series.

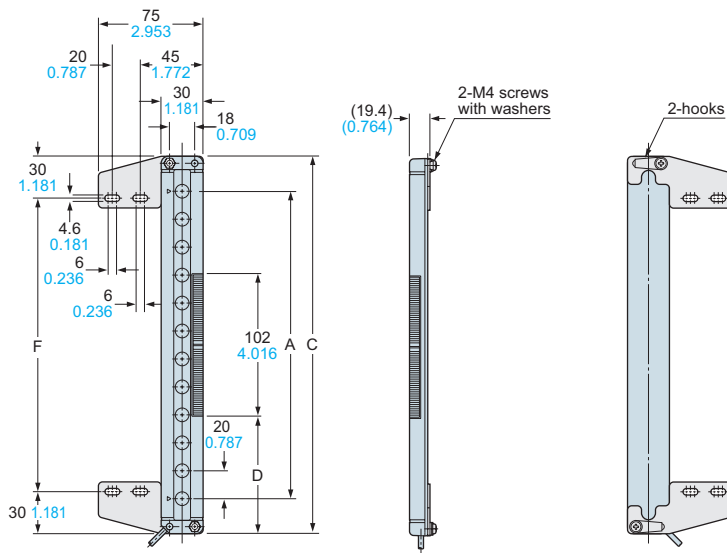


| Model No. | A | C | D | F |
|---------------------|------------|------------|-----------|------------|
| NA2-N8(-PN) | 140 5.512 | 190 7.480 | 52 2.047 | 130 5.118 |
| NA2-N12(-PN) | 220 8.661 | 270 10.630 | 84 3.307 | 210 8.268 |
| NA2-N16(-PN) | 300 11.811 | 350 13.780 | 124 4.882 | 290 11.417 |
| NA2-N20(-PN) | 380 14.961 | 430 16.929 | 164 6.457 | 370 14.567 |
| NA2-N24(-PN) | 460 18.110 | 510 20.079 | 204 8.031 | 450 17.717 |
| NA2-N28(-PN) | 540 21.260 | 590 23.228 | 244 9.606 | 530 20.866 |

MS-NA3-N□

Sensor supporting bracket (Optional)

Assembly dimensions


Mounting drawing with the receiver

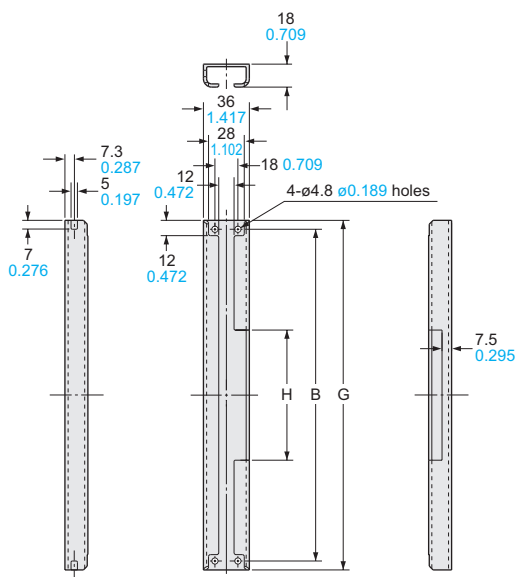

Material: Aluminum (Black ALMITE)

Two bracket set

Note: The sensor supporting bracket can be used for both the emitter and the receiver.

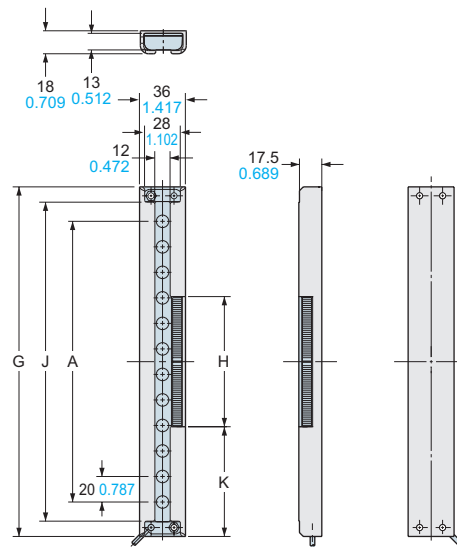

| Model No. | A | B | G | H | J | K |
|-------------------|------------|------------|------------|-----------|------------|-----------|
| MS-NA3-N8 | 140 5.512 | 180 7.087 | 194 7.638 | 118 4.646 | 170 6.693 | 38 1.496 |
| MS-NA3-N12 | 220 8.661 | 260 10.236 | 274 10.787 | 102 4.016 | 250 9.843 | 86 3.386 |
| MS-NA3-N16 | 300 11.811 | 340 13.386 | 354 13.937 | 102 4.016 | 330 12.992 | 126 4.961 |
| MS-NA3-N20 | 380 14.961 | 420 16.535 | 434 17.087 | 102 4.016 | 410 16.142 | 166 6.535 |
| MS-NA3-N24 | 460 18.110 | 500 19.685 | 514 20.236 | 102 4.016 | 490 19.291 | 206 8.110 |
| MS-NA3-N28 | 540 21.260 | 580 22.835 | 594 23.386 | 102 4.016 | 570 22.441 | 246 9.685 |